


VALIDO SOLO PER
VERSIONI SPECIALI

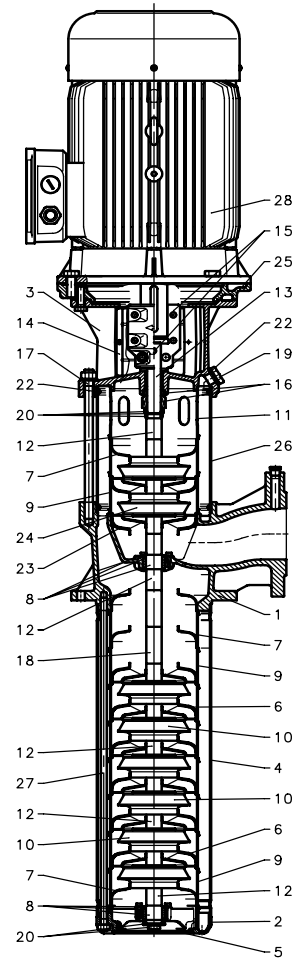

VALIDO SOLO PER
VERSIONI SPECIALI

LEGEND FOR WRITTEN : VALID ONLY FOR SPECIAL VERSIONS

ITEM N	DESCRIZIONE	DESCRIPTION	Q.TA' Q.TY	CODICE - CODE										
				SVI6001/08S	SVI6002/08S	SVI6003/08S	SVI6004/08S	SVI6005/08S	-	-	-	-		
				10244221H	10244222H	10244223H	10244224H	10244225H	-	-	-	-	-	-
				SVI6001/11S	SVI6002/11S	SVI6003/11S	SVI6004/11S	SVI6005/11S	SVI6006/13S	SVI6007/13S	SVI6008/13S			
				10244221L	10244222L	10244223L	10244224L	10244225L	10244226N	10244227N	10244228N			
				SVI6001/14S	SVI6002/14S	SVI6003/14S	SVI6004/14S	SVI6005/14S	SVI6006/16S	SVI6007/16S	SVI6008/16S			
				O/R	10244222P	O/R	10244224P	10244225P	10244226R	10244227R	10244228R			
				3 kW	5,5 kW	7,5 kW	11 kW	15 kW		18,5 kW	22 kW			
1	Bocca di mandata	Delivery outlet	1	151450500			151450510				151450530			
2	Fondello di aspirazione	Suction bottom cover	1				161408140							
3	Lanterna	Adaptor	1				-				161452801			
4	Camicia inferiore - 8 stadi	Lower sleeve - 8 stages	=>				1-166441340				-			
	Camicia inferiore - 11 stadi	Lower sleeve - 11 stages	=>								1-166441370			
	Camicia inferiore - 14 stadi	Lower sleeve - 14 stages	=>								2-166441390 (168601640 - anello unione non incl. / connecting ring not incl.)			
5	Filtro	Strainer	1				164600730							
* 6	Diffusore destro	Right diffuser					152801240							
			=>	1	2	3	4	5	4	5	6			
7	Coperchio diffusore	Diffuser cover	=>				Q2 - 164001740				Q3 - 164001740			
8	Kit cuscinetto	Bearing kit					148992210							
	N-B 8-11-14 stadi	N-B 8-11-14 stages	=>				2/2/3				-			
	B	B	=>				-				3			
9	Distanziale diffusori	Diffuser spacer	Q				162502310							
* 10	Girante destra	Right impeller					150702260							
			R	1	2	3	4	5	4	5	6			
11	Distanziale finale	Final spacer	1				162502290							
12	Distanziale girante	Impeller spacer					162502430							
			=>	1	2	3	4	5	9	10	11			
13	Albero N-B 8-11-14 stadi	Shaft N-B 8-11-14 stages	1				165042560 / 165042570 / 165042575				-			
	Albero B 13-16 stadi	Shaft B 13-16 stages					-				165042530 / 165042580			
14	Protezione giunto	Coupling guard	2	164206580			164206590							
15	Kit semigiunti	Pair of couplings kit	1	148992390	148992400		148992410						148992420	
* 16	Tenuta meccanica	Mechanical seal	1				002232570							
17	Tirante	Tie rod	4				-				167103480			
	Dado M16	Nut M16					-				002617888			
18	Distanziale sostit. girante	Spacer replacing impeller	Q1				162502460							
19	Tappo carico (+ OR)	Fill plug (+ OR)	1				-				140170290			
* 20	Kit blocc. pacco giranti	Fixing impeller pack kit	1				148992160							
* 22	OR	OR	- 2				-				002221691			
* 23	Diffusore sinistro	Left diffuser					-				152801250			
			=>				-				2			
* 24	Girante sinistra	Left impeller					-				150702270			
			L				-				2			
25	Flangia per raccordo	Flange for connection	1				-				161050590			
26	Camicia superiore	Higher sleeve	1				-				166406780			
27	Tirante + dado M12	Tie rod + nut M12	4+4				167103430 + 002630710				-	-	-	
							167103460 + 002630710							
							167103470 + 002630710							
28	Motore trifase (T)	Three phase motor (T)	1	107106255	107106337	107106347	107106397	107106421	107106431	107106447				
	Tipo	Type		LM100RB14/330	LM132RB5/355	LM132RB5/375	LM160RB5/3110	LM160B5/3150	LM160B5/3185	LM180RB5/3220				
** 29	Supporto boccola sald.	Bushing support					151402690							
	N-B 8-11-14 stadi	N-B 8-11-14 stages	=>				1/1/2				-			
	B	B	=>				-				1			
** 30	Distanziale per supp. spec.	Spacer for special support					162502760							
	N-B 8-11-14 stadi	N-B 8-11-14 stages	=>				2/2/3				-			
	B	B	=>				-				2			

* Parti di ricambio consigliate - Recommended spare parts

Q = N. stadi / stages

Q1 = Q - (L+R) - 2 ; Per N-B / For N-B => 14 stadi/stages, Q1 = Q - (L+R) - 4

Q2 = Q - (L+R) ; Per N-B / For N-B => 14 stadi/stages, Q1 = Q - (L+R) - 1

Q3 = Q - (L+R) + 1, Per B / For B

** Solo Versioni Speciali - Only Special Versions:

B = Bilanciate / Balanced , N - B = Non Bilanciate / Not Balanced